

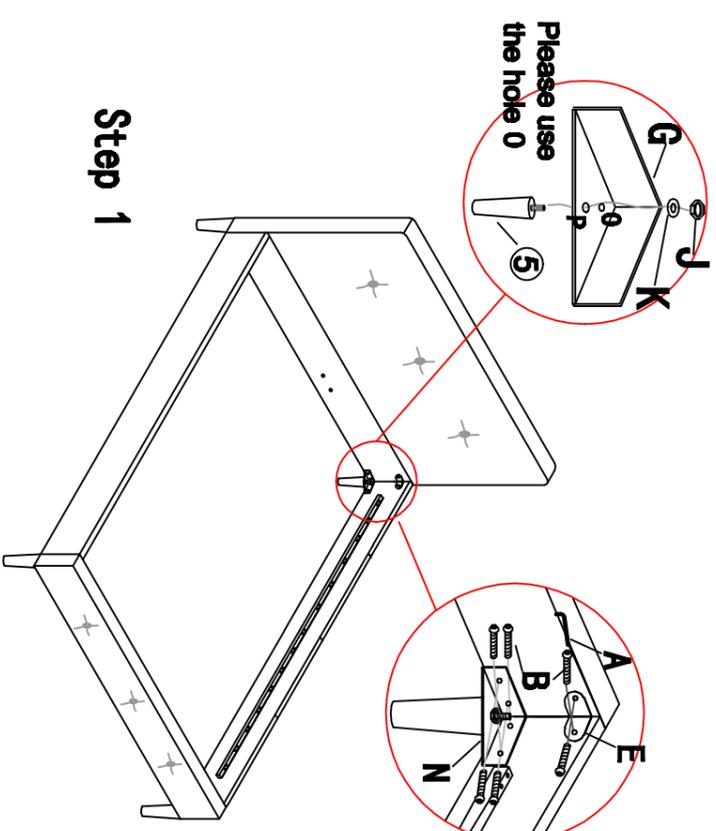



ASSEMBLY INSTRUCTION LTF07A/LTF08A 140/160/180X200

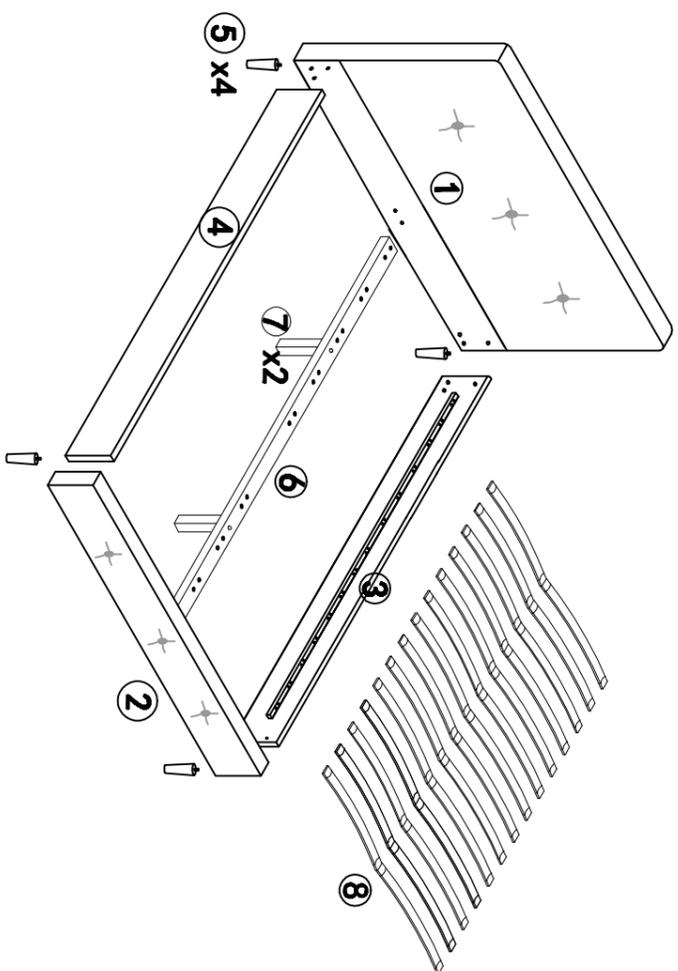


Step 1

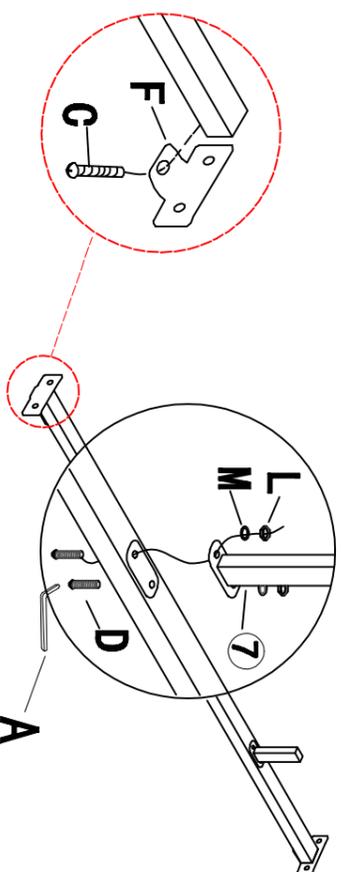

Step 2

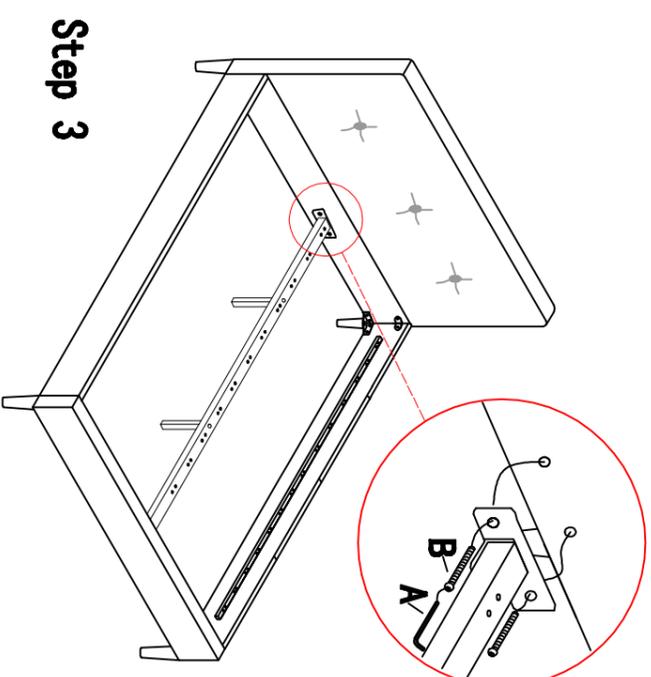

Step 3

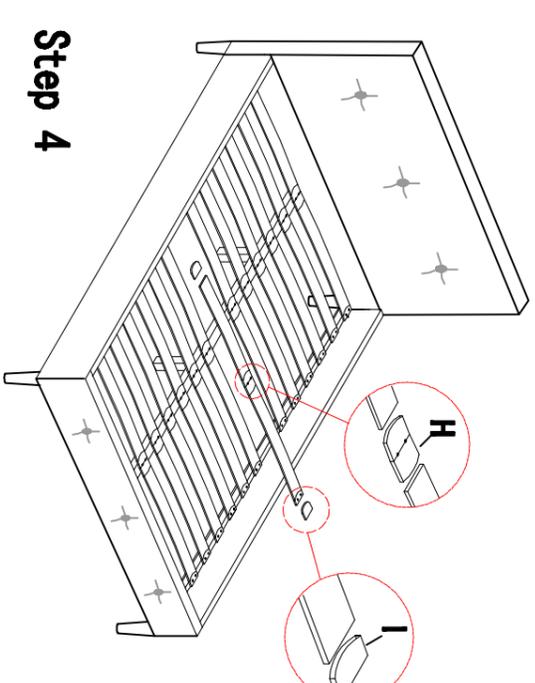

Step 4

- Ax1
- Bx28
- Cx2
- Dx4
- Ex4
- Fx2
- Gx4
- Hx14
- Ix28
- Jx4
- Kx4
- Lx4
- Mx4